EUROPEAN ORGANISATION FOR THE SAFETY OF AIR NAVIGATION

EUROCONTROL

EUROCONTROL STANDARD DOCUMENT

FOR

SURVEILLANCE DATA EXCHANGE

Part 10: Category 63

Sensor Status Messages

EUROPEAN AIR TRAFFIC MANAGEMENT

DOCUMENT IDENTIFICATION SHEET

DOCUMENT DESCRIPTION

Document Title	
Surveillance Data Exchange - Part 10 Sensor Status Messages	

EWP DELIVERABLE REFERENCE NUMBER		
PROGRAMME REFERENCE INDEX	**EDITION :**	1.2
SUR.ET1.ST05.2000-STD-10-01	**EDITION DATE :**	April 2007

Abstract

This document describes the application of ASTERIX to Sensor Status Messages

Keywords

| ASTERIX | Category 63 | Sensor Status
Messages | |

CONTACT PERSON :	A. Engel	**TEL :** +32-2-729 3355	**UNIT :**	DAP/SUR

DOCUMENT STATUS AND TYPE

STATUS		CATEGORY		CLASSIFICATION	
Working Draft	☐	Executive Task	☐	General Public	☑
Draft	☐	Specialist Task	☐	EATMP	☐
Proposed Issue	☐	Lower Layer Task	☑	Restricted	☐
Released Issue	☑				

ELECTRONIC BACKUP

INTERNAL REFERENCE NAME :

HOST SYSTEM	MEDIA	SOFTWARE(S)
Microsoft Windows	Type : Hard disk	
	Media Identification :	

DOCUMENT APPROVAL

The following table identifies all management authorities who have successively approved the present issue of this document.

AUTHORITY	NAME AND SIGNATURE	DATE
ASTERIX Manager	D. Doukas	
SUR Domain Manager	J. Berends	
SURT Chairman	M. Rees	
EATM/DAP Director	G. Kerkhofs	

DOCUMENT CHANGE RECORD

The following table records the complete history of the successive editions of the present document.

EDITION	DATE	REASON FOR CHANGE	SECTIONS PAGES AFFECTED
0.10	Jul. 1999	Creation of Eurocontrol document	ALL
0.11	Dec. 1999	Modifications in definitions and items	ALL
0.12	Feb. 2000	• Document renamed, • New message type and item added	ALL
0.13	Jun. 2000	Modifications in items	ALL
0.14	Dec. 2000	Modifications in items	ALL
0.15	Mar. 2001	Editorial corrections	ALL
0.16	Oct. 2002	Suppression of data related to the transmission of Service Information messages	ALL
0.17	Dec. 2002	Modification of I063/060 Suppression of I063/100, I063/101, I063/102	5.2.5
0.18	March 2003	Modification of the title Correction of the UAP	5.3
0.19	June 2003	Correction of the UAP	5.3
0.20	August 2003	Addition of "no plot warning" bit to I063/060	5.2.5
0.21	Nov. 2003	Editorial modifications	5.2.1 / 5.2.4/ 5.2.5
1.0	March 2004	Addition of encoding rules to precise the mandatory items Indication that negative values are coded with the two's complement form	
1.1	March 2005	Document Identification Sheet updated Document Approval page updated	Page ii Page iii
1.2	April 2007	Document Identification Sheet updated Document Approval page updated	Page ii Page iii

TABLE OF CONTENTS

1. INTRODUCTION

1.1 Scope

1.1.1 This document describes the structure for the transmission of sensor status messages.

1.1.2 This document defines the data out of Category 063.

Intentionally left blank

2.   REFERENCES

2.1   General

The following Documents and Standards contain provisions which, through references in this text, constitute provisions of this Eurocontrol Standard Document.

At the time of publication of this Eurocontrol Standard Document, the editions indicated for the referenced documents and standards were valid.

Any revision of the referenced ICAO Documents shall be immediately taken into account to revise this Eurocontrol Standard Document.

Revisions of the other referenced documents shall not form part of the provisions of this Eurocontrol Standard Document until they are formally reviewed and incorporated into this Eurocontrol Standard Document.

In the case of a conflict between the requirements of this Eurocontrol Standard Document and the contents of the other referenced documents, this Eurocontrol Standard Document shall take precedence.

2.2   Reference Documents

1.   Eurocontrol Standard 000-1-92. Directives for the Uniform Drafting and Presentation of Eurocontrol Standard Documents. 1992.

2.   Eurocontrol Standard SUR.ET1.ST05.2000-STD-01-01. All Purpose Structured Eurocontrol Radar Information Exchange - ASTERIX, edition 1.29 February 2002

Intentionally left blank

3. DEFINITIONS, ACRONYMS AND ABBREVIATIONS

3.1 Definitions

For the purposes of this Eurocontrol Document, the following definitions shall apply:

3.1.1 **Broadcast Service:** A service not needing a session establishment between a user and a SDPS.

3.1.2 **Catalogue of Data Items:** List of all the possible Data Items of each Data Category describing the Data Items by their reference, structure, size and units (where applicable).

3.1.3 **Data Block:** Unit of information seen by the application as a discrete entity by its contents. A Data Block contains one or more Record(s) containing data of the same category.

3.1.4 **Data Category:** Classification of the data in order to permit inter alia an easy identification.

3.1.5 **Data Field:** Physical implementation for the purpose of communication of a Data Item, it is associated with a unique Field Reference Number and is the smallest unit of transmitted information.

3.1.6 **Data Item:** The smallest unit of information in each Data Category.

3.1.7 **Record:** A collection of transmitted Data Fields of the same category preceded by a Field Specification field, signalling the presence/absence of the various Data Fields

3.1.8 **Service:** An SDPS information service is uniquely identified by a service identification and is composed of a track element and a sensor element. A track element is characterised by the track selection (e.g. set of Mode-3/A codes, filtering in height, primary only, secondary only…), the track item selection (e.g. WGS-84 position, Time of Day…), the track transmission characteristics (e.g. synchronised on sensor, periodical, a-periodical event-triggered). A sensor element is characterised by the sensor selection, the sensor item selection, the sensor transmission characteristics.

3.1.9 **Session:** Point to point connection between a user and a SDPS.

3.1.10 **User Application Profile:** The mechanism for assigning Data Items to Data Fields, and containing all necessary information which needs to be standardised for the successful encoding and decoding of the messages.

3.2 Acronyms and Abbreviations

For the purposes of this Eurocontrol Document, the following shall apply:

° Degree (angle)
ADS-B Automatic Dependent Surveillance - Broadcast
ASTERIX **A**ll Purpose **ST**ructured **Eurocontrol** su**R**veillance **I**nformation E**X**change

CAT Data Category

EATMP European Air Traffic Management Programme

FRN Field Reference Number
FSPEC Field Specification
FX Field Extension Indicator

ICAO International Civil Aviation Organization

LEN Length Indicator
LSB Least Significant Bit

PSR Primary Surveillance Radar

RE Reserved Expansion Indicator
REP Field Repetition Indicator

s second, unit of time
SAC System Area Code
SDPS Surveillance Data Processing System
SIC System Identification Code
SP Special Purpose Indicator
SSR Secondary Surveillance Radar
STFRDE Surveillance Task Force on Radar Data Exchange
SURT Surveillance Team (EATMP)

UAP User Application Profile (see Definitions)
UTC Co-ordinated Universal Time

WGS-84 World Geodetic System 84

4.   GENERAL PRINCIPLES

4.1   General

This document describes the application of ASTERIX to Sensor Information messages
One message reports the status for one sensor.

4.2   Time Management

The timestamping shall comply with ICAO Annex 5.

4.3   Unused Bits in Data Items.

Decoders of ASTERIX data shall never assume and rely on specific settings of spare or unused Bits. However in order to improve the readability of binary dumps of ASTERIX records, it is recommended to set all spare Bits to zero.

4.4 User Application Profile and Data Blocks

4.4.1 A single User Application Profile (UAP) is defined and shall be used for SDPS service messages.

4.4.2 Data Blocks shall have the following layout.

CAT = 063	LEN		FSPEC	Items of the first record		FSPEC	Items of the last record

where:

- Data Category (CAT) = 063, is a one-octet field indicating that the Data Block contains SDPS status messages;

- Length Indicator (LEN) is a two-octet field indicating the total length in octets of the Data Block, including the CAT and LEN fields;

- FSPEC is the Field Specification.

4.5 Composition of messages

4.5.1 Messages shall be composed of Data Items assembled in the order defined by the Field Reference Number (FRN) in the associated UAP.

4.5.2 When sent, items shall always be transmitted in a Record with the corresponding FSPEC bits set to one.

5. LAYOUT OF MESSAGES

5.1 Standard Data Items

The standardised Data Items which shall be used for the transmission of SDPS service messages are defined in Table 1 and described in the following pages. The column "Encoding rules" indicates what items are mandatory (M) or optional (O) in a record of ASTERIX Cat 063.

Table 1 - Data Items of Category 063

Data Item Reference Number	Description	System Units	Encoding rules
I063/010	Data Source Identifier	N.A.	M
I063/015	Service Identification	N.A.	O
I063/030	Time of Message	1/128 s	M
I063/050	Sensor Identifier	N.A.	M
I063/060	Sensor Configuration and Status	N.A.	O
I063/070	Time Stamping Bias	1 ms	O
I063/080	SSR/Mode S Range Gain and Bias	N.A.	O
I063/081	SSR/Mode S Azimuth Bias	0.0055°	O
I063/090	PSR Range Gain and Bias	N.A.	O
I063/091	PSR Azimuth Bias	0.0055°	O
I063/092	PSR Elevation Bias	0.0055°	O
NOTE: N.A. = Not Applicable			

5.2 Description of Standard Data Items

5.2.1 Data Item I063/010, Data Source Identifier

Definition : Identification of the SDPS sending the data
Format : Two-octet fixed length Data Item
Structure:
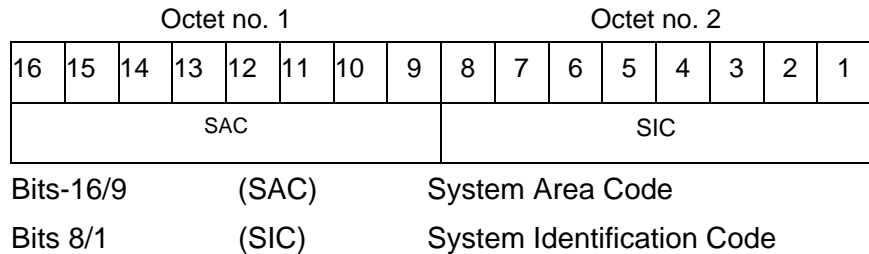
Octet no. 1								Octet no. 2							
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
SAC								SIC							

Bits-16/9   (SAC)   System Area Code

Bits 8/1   (SIC)   System Identification Code

NOTE -   The up-to-date list of SACs is published on the Eurocontrol Web Site
(http://www.eurocontrol.int).

Encoding Rule :
    This Item shall be present in every ASTERIX record

5.2.2 Data Item I063/015, Service Identification

Definition : Identification of the service provided to one or more users.
Format : One-Octet fixed length data item.
Structure:

Octet no. 1							
8	7	6	5	4	3	2	1
Service Identification							

Bits-8/1   Service Identification

NOTE -   the service identification is allocated by the SDPS

Encoding Rule :
    This Item is optional

5.2.3 **Data Item I063/030, Time of Message**

Definition : Absolute time stamping of the message, in the form of elapsed time since last midnight, expressed as UTC.

Format : Three-Octet fixed length data item.

Structure:

Octet no. 1

24	23	22	21	20	19	18	17
Time

Octet no. 2   Octet no. 3

16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Of Message															LSB
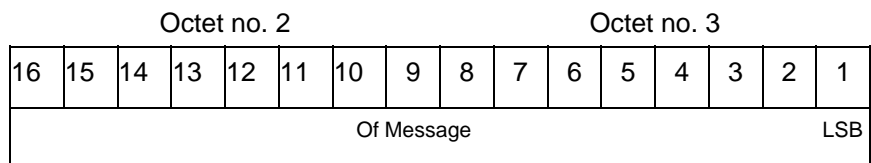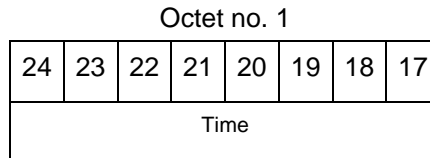
Bit-1   (LSB) $= 2^{-7}$ s $= 1/128$ s

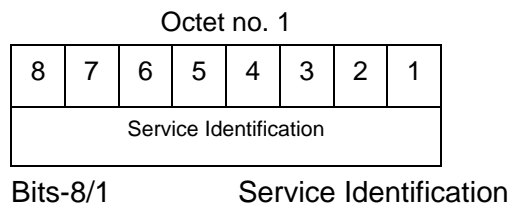**NOTE -** The time of the day value is reset to zero at every midnight.

Encoding Rule :

This Item shall be present in every ASTERIX record

5.2.4 **Data Item I063/050, Sensor Identifier**

Definition : Identification of the Sensor to which the provided information are related.

Format : Two-byte fixed length data item

Octet no. 1								Octet no. 2							
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
SAC								SIC							

Bits 16/9 (SAC) System Area Code

Bits 8/1 (SIC) System Identification Code

NOTE - The up-to-date list of SACs is published on the Eurocontrol Web Site (http://www.eurocontrol.int).

Encoding Rule :

This Item shall be present in every ASTERIX record

5.2.5 Data Item I063/060, Sensor Configuration and Status

Definition : Configuration and status of the sensor
Format : Variable length data item comprising a first part of one octet, followed by one-octet extent as necessary

Structure

Of First Part :

8	7	6	5	4	3	2	1
CON		PSR	SSR	MDS	ADS	MLT	FX

Bit 8/7	(CON)	= 00	operational
		= 01	degraded
		= 10	Initialization
		= 11	not currently connected
Bit 6	(PSR)	= 0	PSR GO
		= 1	PSR NOGO
Bit 5	(SSR)	= 0	SSR GO
		= 1	SSR NOGO
Bit 4	(MDS)	= 0	Mode S GO
		= 1	Mode S NOGO
Bit 3	(ADS)	= 0	ADS GO
		= 1	ADS NOGO
Bit 2	(MLT)	= 0	MLT GO
		= 1	MLT NOGO
Bit 1	(FX)	= 0	End of Data Item
		= 1	Extension into first extent

Structure

Of First Extent :

8	7	6	5	4	3	2	1
OPS	ODP	OXT	MSC	TSV	NPW	0	FX

Bit-8	(OPS)	Operational Release Status of the System
		= 0 System is released for operational use
		= 1 Operational use of System is inhibited,
Bit-7	(ODP)	Data Processor Overload Indicator
		= 0 Default, no overload
		= 1 Overload in DP

Bit-6   (OXT)   Transmission Subsystem Overload Status
                    = 0 Default, no overload
                    = 1 Overload in transmission subsystem

Bit-5   (MSC)   Monitoring System Connected Status
                    = 0 Monitoring system connected
                    = 1 Monitoring system disconnected

Bit-4   (TSV)   Time Source Validity
                    = 0 valid
                    = 1 invalid

Bits 3   (NPW)   No Plot Warning
                    = 0 Default (no meaning)
                    = 1 No plots being received

Bit 2   spare Bit set to zero

Bit 1   (FX)   = 0   End of Data Item
                    = 1   Extension into next extent

NOTES
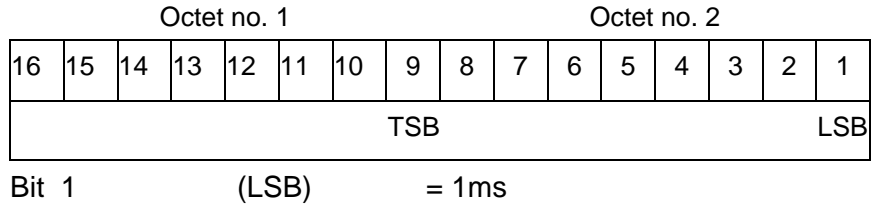1.   GO/NOGO information from PSR, SSR, Mode S, ADS and MLT is derived
     from monosensor categories and has a meaning only for operational
     sensors, whereas (CON) is derived by the SDPS.
2.   The information (OPS), (ODP), (OXT), (MSC) and (TSV) are only related to
     CNS/ATM Ground Station and are derived from monosensor category
     (ASTERIX Cat 023).

Encoding Rule :
   This Item is optional
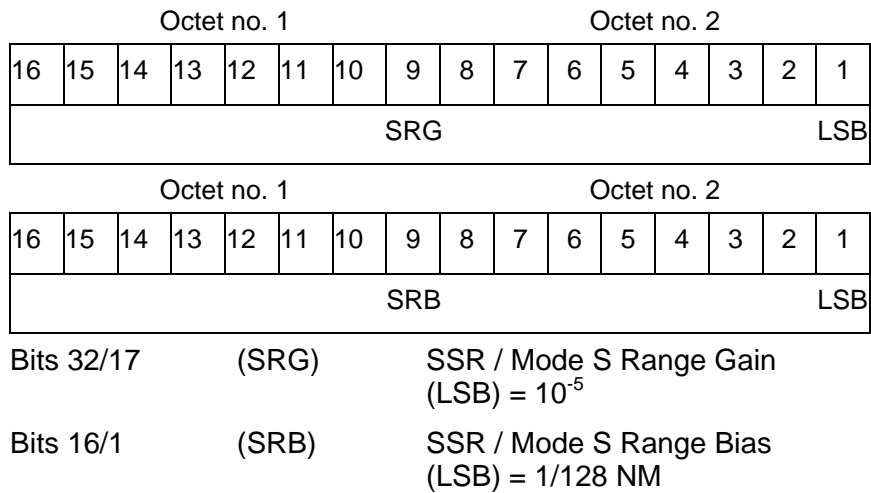
5.2.6   Data Item I063/070, Time Stamping Bias

Definition :   Plot Time stamping bias
Format :   Two-byte fixed length data item.

	Octet no. 1									Octet no. 2					
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
						TSB									LSB

Bit 1   (LSB)   = 1ms

Encoding Rule :
     This Item is optional

5.2.7   Data Item I063/080, SSR / Mode S Range Gain and Bias

Definition :   SSR / Mode S Range Gain and Range Bias, in two's complement form.
Format :   Two-byte fixed length data item.

	Octet no. 1									Octet no. 2					
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
						SRG									LSB

	Octet no. 1									Octet no. 2					
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
						SRB									LSB

Bits 32/17   (SRG)   SSR / Mode S Range Gain
                                   (LSB) = 10^{-5}

Bits 16/1   (SRB)   SSR / Mode S Range Bias
                                   (LSB) = 1/128 NM

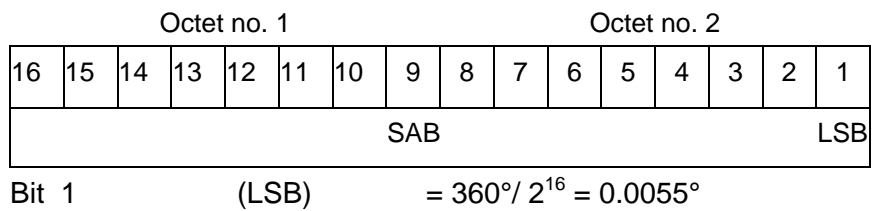**NOTE -**   The following formula is used to correct range:

$$\rho_{corrected} = \left(\frac{\rho_{measured} - range\_bias}{1 + range\_gain} \right)$$

Encoding Rule :
     This Item is optional

5.2.8　Data Item I063/081, SSR / Mode S Azimuth Bias

Definition :　SSR / Mode S Azimuth Bias, in two's complement form.
Format :　Two-byte fixed length data item.

Octet no. 1								Octet no. 2							
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
SAB															LSB

Bit　1　　(LSB)　　$= 360°/ 2^{16} = 0.0055°$

NOTE -　The following formula is used to correct azimuth:

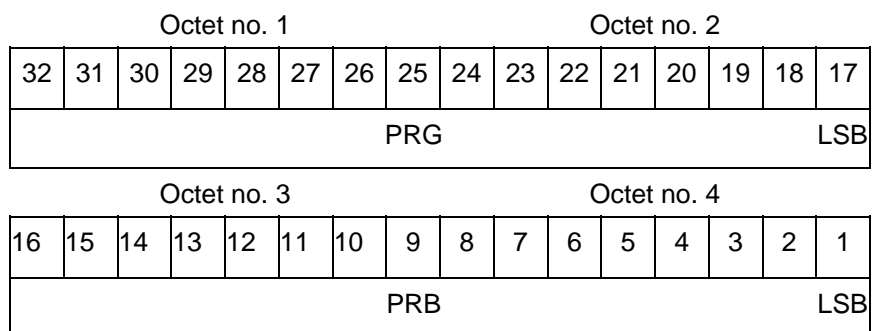$$\theta_{corrected} = \theta_{measured} - azimuth\_bias$$

Encoding Rule :
　This Item is optional

5.2.9　Data Item I063/090, PSR Range Gain and Bias

Definition :　PSR Range Gain and PSR Range Bias, in two's complement form.
Format :　Four-byte fixed length data item.

Octet no. 1								Octet no. 2							
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
PRG															LSB

Octet no. 3								Octet no. 4							
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
PRB															LSB

Bits 32/17　　(PRG)　　PSR Range Gain
　　　　　　　　　　　　(LSB) $= 10^{-5}$

Bits 16/1　　(PRB)　　PSR Range Bias
　　　　　　　　　　　　(LSB) $= 1/128$ NM

NOTE -　The following formula is used to correct range:

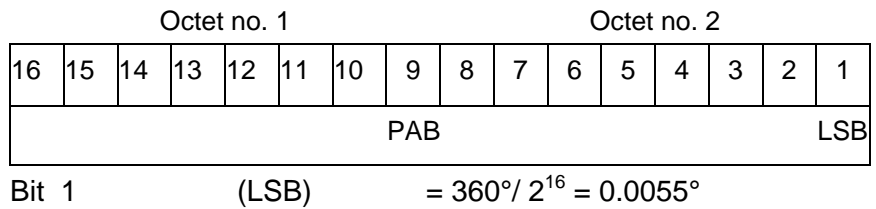$$\rho_{corrected} = \left(\frac{\rho_{measured} - range\_bias}{1 + range\_gain} \right)$$

Encoding Rule :
　This Item is optional

5.2.10 **Data Item I063/091, PSR Azimuth Bias**

Definition : PSR Azimuth Bias, in two's complement form.
Format : Two-byte fixed length data item.

			Octet no. 1								Octet no. 2				
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
								PAB							LSB

Bit 1 (LSB) $= 360°/ 2^{16} = 0.0055°$

NOTE - The following formula is used to correct azimuth:

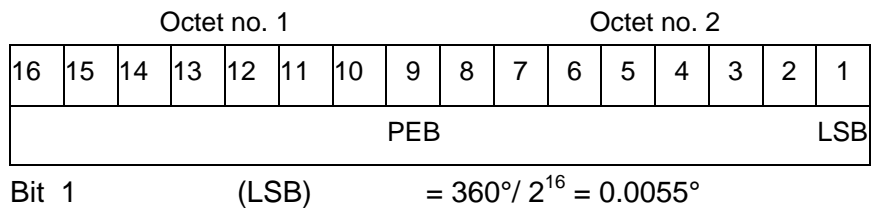$$\theta_{corrected} = \theta_{measured} - azimuth\_bias$$

Encoding Rule :
   This Item is optional

5.2.11 **Data Item I063/092, PSR Elevation Bias**

Definition : PSR Elevation Bias, in two's complement form.
Format : Two-byte fixed length data item.

			Octet no. 1								Octet no. 2				
16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
								PEB							LSB

Bit 1 (LSB) $= 360°/ 2^{16} = 0.0055°$

Encoding Rule :
   This Item is optional

5.3 User Application Profile for Category 063

The following User Application Profile shall be used for the transmission of Sensor status messages.

Table 2 – Sensor Status Messages UAP

FRN	Data Item	Information	Length
1	I063/010	Data Source Identifier	2
2	I063/015	Service Identification	1
3	I063/030	Time of Message	3
4	I063/050	Sensor Identifier	2
5	I063/060	Sensor Configuration and Status	2
6	I063/070	Time Stamping Bias	3
7	I063/080	SSR/Mode S Range Gain and Bias	4
FX	-	Field extension indicator	-
8	I063/081	SSR/Mode S Azimuth Bias	2
9	I063/090	PSR Range Gain and Bias	4
10	I063/091	PSR Azimuth Bias	2
11	I063/092	PSR Elevation Bias	2
12	-	spare	-
13	RE	Reserved Expansion Field	1+1+
14	SP	Special Purpose Field	1+1+
FX	-	Field extension indicator	-

In the above table

- the first column indicates the Field Reference Number (FRN) associated to each Data Item used in the UAP;

- the fourth column gives the format and the length of each item, a stand-alone figure indicates the octet-count of a fixed-length Data Item, 1+ indicates a variable-length Data Item comprising a first part of 1 octet followed by n-octets extents as necessary.